


BATTERY REPLACEMENT FOR SMOKE DETECTOR



Please Note: Upon removing the detector from the base, you may hear your keypad beeping. This is the tamper switch contained inside the smoke detector.

After you have replaced the battery, and reinstalled the detector, you will reset your system. This will silence the beeping, and clear the low battery message from the display.

Remove detector from mounting base: Twist the detector counter-clockwise to release from mounting base. You may need to depress the tab (right photo) to allow this.

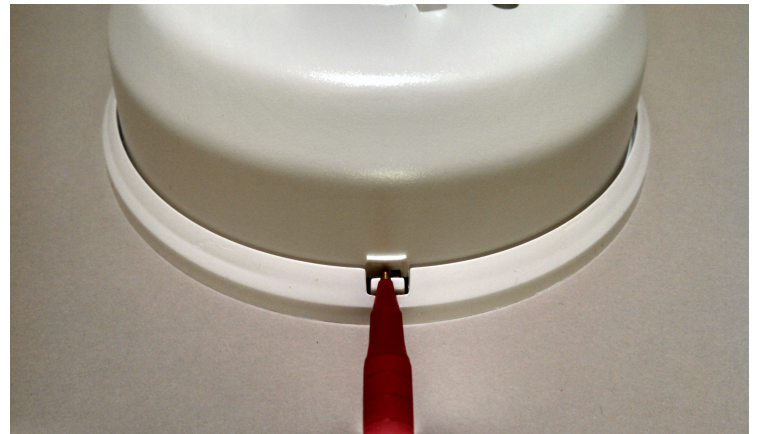

Remove old battery from sensor. The battery required for this model is part number **CR123**. Install new battery.

Install detector in mounting base: Insert detector in mounting base and twist clockwise. When the Detector is fully installed, it will no longer rotate in the mounting base.

Please note: Early versions of this smoke Detector require two batteries. These units Only have a single red indicator light on the Face, and do not have the green light shown.

You can now reset your system: Enter your 4 digit code and OFF two times.
(Code + OFF, Code + OFF)

Your system should now be ready to use again!



Any Questions? Please give us a call:
408-358-1500