

BATTERY REPLACEMENT FOR 4 BUTTON FOB MODEL 5834-4





Flip over FOB.

Open the cover: Using a very small phillips head screw driver, un-screw the screw on back of FOB (see image to left).

Open the cover: Insert flat head screw driver into recessed notch located on the side of the FOB. Twist slightly until cover releases (see image to right). Remove cover.

Please note: The metal around the battery is very DELICATE! Please be careful when removing not to damage the surrounding metal.

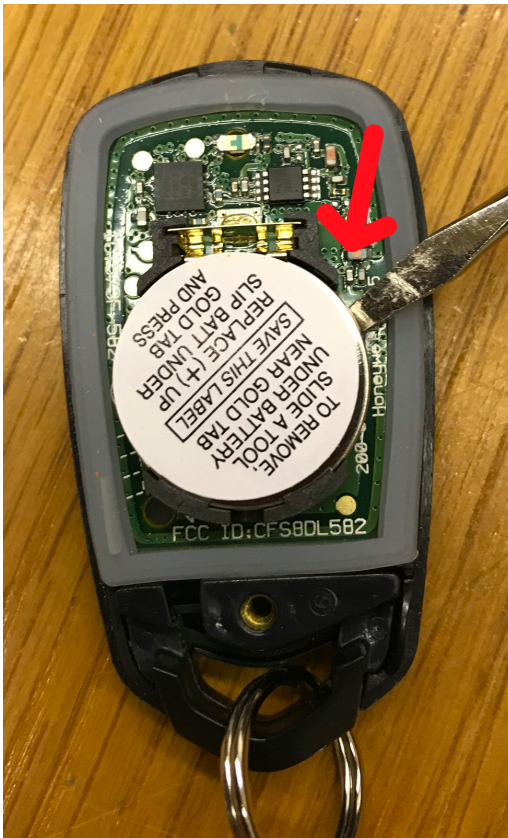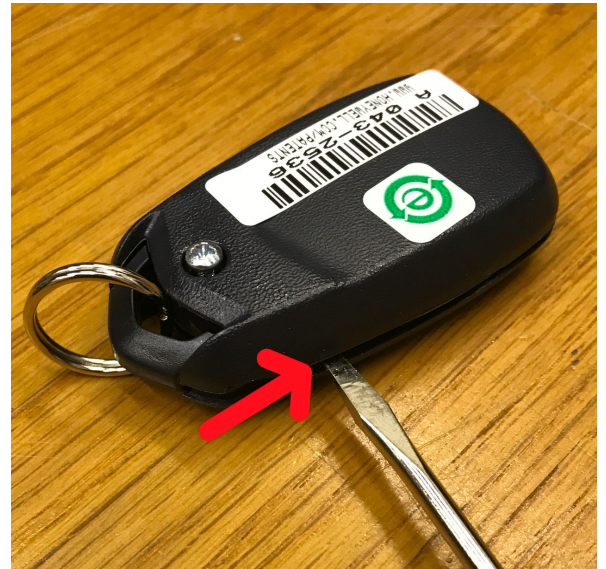

Place a butter knife or small flat head screw driver under outer-most edge of circular battery. Leverage up gently and remove old battery from FOB. The battery required for this model is part number CR2032. Install the new battery by replacing with positive (+) side up. Slip battery under gold tab and press.

Close the cover: Place cover back onto FOB and screw in original screw.

You can now reset your system: Enter your 4 digit code and OFF two times. (Code + OFF, Code + OFF)
Your system should now be ready to use again!

Any Questions? Please give us a call:
408-358-1500