

BATTERY REPLACEMENT FOR 5817CBXT



Please Note: Upon opening the fire sensor cover, you may hear your keypad beeping. This is the tamper switch contained in certain model sensors.

After you have replaced the battery, and closed the sensor cover, you will reset your system. This will silence the beeping, and clear the low battery message from the display.



Open the cover: Insert flat head screw driver into notched tab on the bottom right side of the sensor (see image to right). Twist slightly until cover releases. Remove cover.

Remove old battery from sensor. The battery required for this model is part number CR123. Install the new battery.

Please note: Hole on bottom left hand side is where you will see the wire coming out (see arrow on image to right).



Close the cover: Place the cover back on the sensor, ensuring the small notch and wire hole are properly re-aligned.

You can now reset your system: Enter your 4 digit code and OFF two times. (Code + OFF, Code + OFF) Your system should now be ready to use again!



Any Questions? Please give us a call:
408-358-1500