

BATTERY REPLACEMENT FOR 5890




Please Note: Upon opening the motion detector cover, you may hear your keypad beeping. This is the tamper switch contained in certain model sensors.

After you have replaced the battery, and closed the sensor cover, you will reset your system. This will silence the beeping, and clear the low battery message from the display.



Open the cover: Insert flat head screw driver into recessed tab located on the bottom center of sensor. Twist slightly until cover releases. (see image to right). Remove cover.

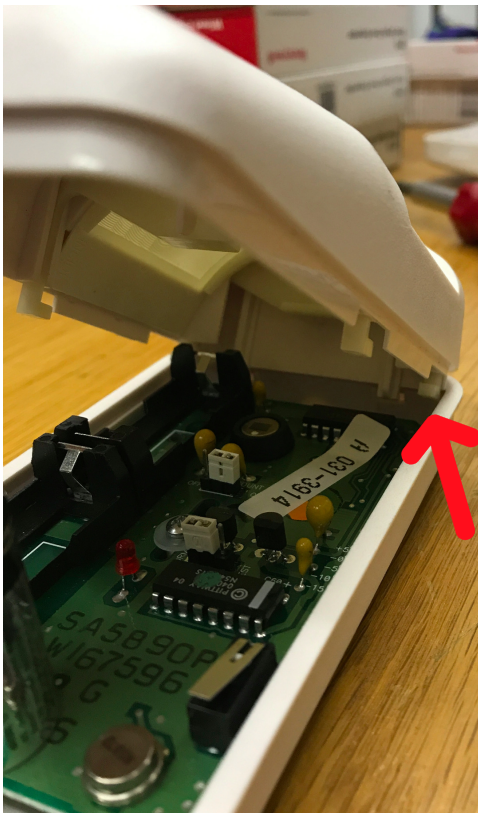

Remove old batteries from sensor. The batteries required for this model is part number CR123. Install the new batteries.

Close the cover: Engage the tab at the top of the cover first (left image), then swing the bottom down to engage the tab. You should hear a "click" when fully closed.

You can now reset your system: Enter your 4 digit code and OFF two times. (Code + OFF, Code + OFF)
Your system should now be ready to use again!

**Any Questions? Please give us a call:
408-358-1500**