

BATTERY REPLACEMENT FOR GSM4GV



Please Note: Upon opening the communicator cover, you will hear your keypad beeping. This is the tamper switch contained in the communicator.


After you have replaced the battery, and closed the cover, you will reset your system. This will silence the beeping, and clear the low battery message from the display.



Open the cover: Insert flat head screw driver (one at a time) into recessed tabs located on the bottom right and left of communicator. Twist slightly until covers releases (see image to the right). Remove cover.



Remove old battery from communicator by removing the red and black wires from top of battery. Slide battery up to remove. The battery required for this model is part number 6V 3.1AH. Install the new battery. (You can purchase battery on Amazon).

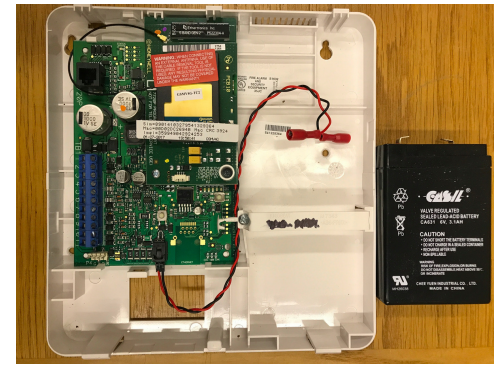

Close the cover: Engage the tabs at the top of the cover first, then swing the bottom down to engage the tab. You should hear a "click" when fully closed.

Please note: The top tabs can be finicky. Be sure they are engaged properly before attempting to click back into the closed position. (See image to left).

You can now reset your system: Enter your 4 digit code and OFF two times. (Code + OFF, Code + OFF) Your system should now be ready to use again!

Any Questions? Please give us a call:
408-358-1500